# THE ORIGINAL SINCE 1967

92503004137REVD







## ZW45 ZAKK WYLDE CRY BABY® WAH WAH

### POWER

The Zakk Wylde Signature Cry Baby<sup>®</sup> Wah Wah is powered by one 9-volt battery (accessed via the bottom of the pedal), an AC adapter such as the Dunlop ECB003/ECB003E, or a DC Brick<sup>™</sup> power supply.

### SETUP INSTRUCTIONS

- Run an instrument cable from your guitar to the ZW45's INSTRUMENT jack.
- Run another instrument cable from the ZW45's AMPLIFIER jack to your amplifier input.
- Turn on the amplifier and begin playing.
- To turn the pedal on/off, push the toe of the pedal down until you feel a "click."
- Located under the rocker at the heel of the pedal is an adjustable torque clutch that allows the amount of resistance the rocker has to being moved. Turn clockwise to increase resistance or counterclockwise to decrease resistance. (Wrench included).

See Diagram A



#### SPECIFICATIONS

#### Imnedance

Impedance	
Input	1 MΩ
Output	10 kΩ
Filter Center Frequency	
Heel Down	250 Hz to 350 Hz
Toe Down	400 Hz to 2.4 kHz
Maximum Level at Center Frequency	
Input	-9 dBV
Output	+6 dBV
Maximum Gain	
Heel Down	+17 dB
Toe Down	+17 dB
Noise Floor*	
Heel Down	-100 dBV
Toe Down	-90 dBV
Bypass	Hardwire
Current Draw	900 uA
Power Supply	9 volts DC
$^{*}V_{\text{REF}} {=} 1V_{\text{RMS}}$ A-weighted	

