



Dunlop



UNIVIBE[®]
CHORUS/VIBRATO

92503021014REVA



UNIVIBE® CHORUS/VIBRATO

This pedal delivers the classic phasey, chorusy, Leslie-sounding goodness Jimi Hendrix™ used in all of its stunning analog glory, featuring colorful, iconic art from legendary rock artist Gered Mankowitz.

DIRECTIONS

- Run a cable from your guitar to the JHM7's INPUT jack and run another cable from the JHM7's OUTPUT jack to your amplifier.
- Start with LEVEL, SPEED, and DEPTH controls at 12 o'clock.
- Turn the effect on by depressing the footswitch.
- Rotate LEVEL knob clockwise to increase overall volume or counterclockwise to decrease it.
- Rotate SPEED knob clockwise to increase sweep rate of effect or counterclockwise to decrease it.
- Rotate the DEPTH knob clockwise to increase intensity of effect or counterclockwise to decrease it.
- Push VIBE button to enter vibrato mode.

POWER

The Jimi Hendrix™ Univibe Chorus/Vibrato can be powered by one 9-volt battery (remove bottom plate to install), an adapter such as the ECB003, or the MXR DC Brick™ and Iso-Brick™ power supplies.

SPECIFICATIONS

Input Impedance	~ 1 MΩ
Output Impedance	5 kΩ
Max Input	0dBV
Max Output	+8dB
Noise Floor	-94 dBV
Speed Control	0.5 Hz to 10.5 Hz
Bypass	True Hardwire
Current Draw	5mA
Power Supply	9 volts DC

[†]A-weighted, all controls at mid position



DUNLOP MANUFACTURING, INC.
P.O. BOX 846 BENICIA, CA 94510 U.S.A.
TEL: 1-707-745-2722 FAX: 1-707-745-2658