

Violin Clip Tuner

VT-77


User's Manual

We wish to thank you for your purchase of Fzone VT-77 Chair Accessories Violin clip tuner, while the clip is well designed for attaching to the scroll/headstock of a violin/viola, this tuner is also capable of tuning and has presets for tuning: Violin, Viola, Guitar and Ukulele and even offers a full range Chromatic mode.

Features

- Specialty Clip offers easy access to tune a variety of instruments
- Internal backlit LCD screen offers excellent visibility even in the most dim surroundings
- The needles point to center and the LCD display will turn green when in tune
- The unit will auto power off when not in use, conserving battery life
- The battery is a standard 3V CR2032 that is included and easily installed

Appearance and sketch

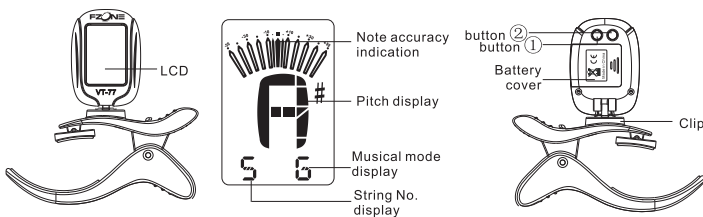

Detailed Use

- Insert the battery with the + side as directed on the unit
- Attaché the tuner to your instrument
- On/Off function press button 1- press and hold again to turn the unit off
- If there is no signal the unit will turn off
- Mode button2, continue to press this button until the desired instrument initial is shown
- Chromatic (C) , Violin (V), Viola (A), Guitar (G) and Ukulele (U)

Tuning


- Turn the unit on while attaching the clip to the headstock of the instrument to be tuned, adjust the swivel base toward you for best reading position
- Press button 2 to select the desired instrument to tune, for example for violin, continue to press button 2 until the V appears on the LCD display
- Lightly pluck the string you wish to tune. The tuner will automatically detect the current pitch and display which string you are tuning, this will appear on the LCD screen
- Make sure you are tuning the correct string if for example you are tuning the second string of a guitar and the display shows 1A the string is too tight and you need to loosen the string until the correct string and note value appear. If the tuner should display 3G while tuning the 2nd string of the guitar then the string is too loose and you need to tighten until 2B is displayed, when the three needles are in the center -0- and the display turns green, your string is in tune.
- After tuning each string it is a good idea to go back and re-check them again. Strings have a way of stretching and going flat, with new strings this is very common due to the amount of attention applied. This is very common with all string instruments.

Specifications

- Tuning mode: Chromatic (C) , Violin (V), Viola (A), Guitar (G) and Ukulele (U)
- Tuning range B0-B7
- A4 Calibration A-440
- Tuning method—clip vibration sensor automatic
- Tolerance +or- 1 cents
- Power 3V CR2032 battery (one piece)

Battery use

- Make sure battery is installed correctly + side (polarity) should be facing up
- Remove the battery if unit will not be used for long periods of time
- If display is erratic or fluctuates when activated remove the battery, wait 10 seconds and re-install. If the display is weak or unclear replace the battery with a new one.
- Always dispose of old battery properly and in accordance with local, state and Federal laws

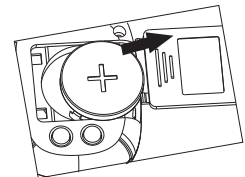

尺寸: 95X176MM
 材质: 80g速写纸
 正反面印